


INLINE Exchange (Regular)

CONNECTION




Connect battery cables to vehicle's battery.

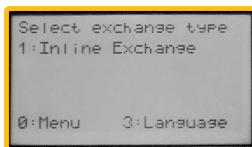


Press **1** for **Inline Exchange**

OPERATION

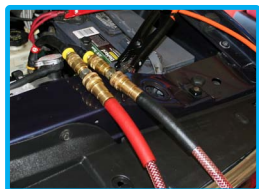



Connect appropriate adapters to vehicle's cooler line fittings.

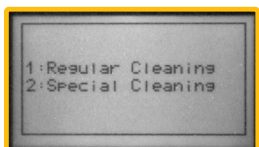
Connect red and black service hoses to quick disconnect adapters on the end of the cooler line adapters.



Use the arrow keys   to select the desired amount to be exchanged.

Press  to proceed. Turn vehicle's **engine on**.

Press **1** for Regular Cleaning. Press  to begin the exchange.

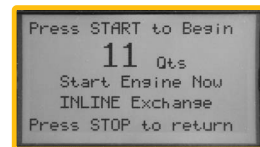

Once exchange is finished the screen will beep and display **"Complete"**.




ADDITIONAL FEATURES



If needed, while running, pressing  once will pause the machine.



Press  to resume from pause, or press  a second time to cancel the exchange

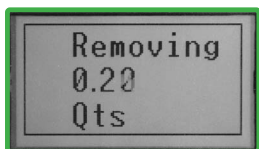

Check the fluid level.

Press  or  to add or remove fluid in 1/4 quart increments.

Use **Option 3** in the main menu to add a full quart and **Option 4** to remove a full quart.

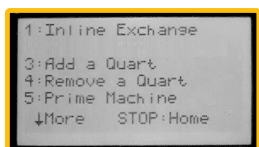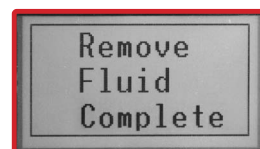


Press **0** to return to the main menu.

INLINE Exchange (Special)

CONNECTION



Connect battery cables to vehicle's battery.

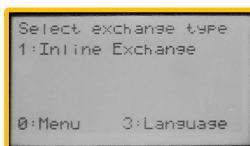



Press **1** for **Inline Exchange**

OPERATION






Connect appropriate adapters to vehicle's cooler line fittings.

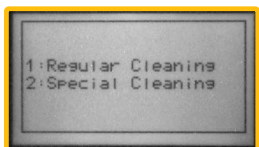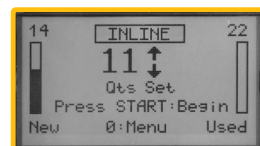
Connect red and black service hoses to quick disconnect adapters on the end of the cooler line adapters.



Use the arrow keys   to select the desired amount to be exchanged.

Press  to proceed. Turn vehicle's **engine on**.


Press  for Special Cleaning. Press  to begin the exchange.

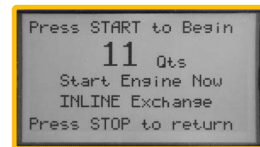

After cleaning for 10 minutes, the exchange begins. Once the exchange is complete the machine will beep and display "**Complete**".




SELECTING A FLUID TANK

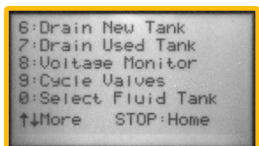


From the Main Menu, press  to proceed to the next menu.

Press  to Select Fluid Tank.

Press  or  to select the desired tank number.

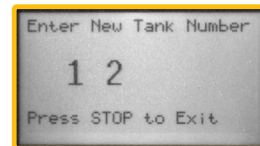


CHANGE VEHICLE'S FILTER

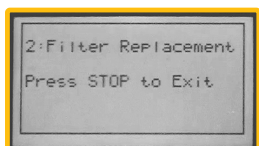


Press  to resume. Press  for Filter Replacement.


Select quantity of fluid to remove from the vehicle. Press .

Turn engine off and replace vehicle's filter. Press  and select the

quantity of fluid to be replaced. Start the vehicle's engine and press .

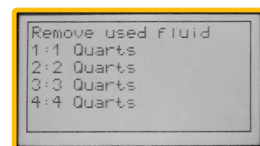


CHANGE LANGUAGE

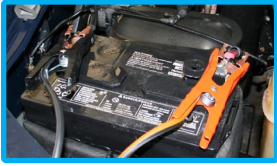


Connect battery cables. From the Startup Menu, press

3
DEF

Select the desired language.

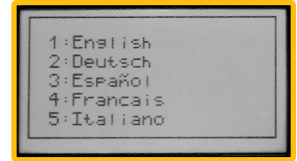


MAIN MENU

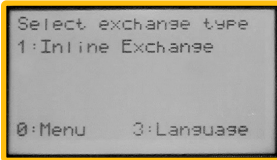

From the Startup Menu, press

0


to access the Main Menu.

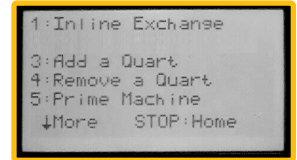

PRIMING THE MACHINE



Make sure there is fluid in the New Fluid Tank. Connect the Red and Black service hoses together using any two mating adapters.

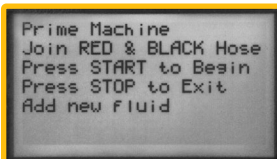

Press



5
JKL

. Press

**ENTER
START
RESUME**

to begin the process.

The unit will shut off when complete.

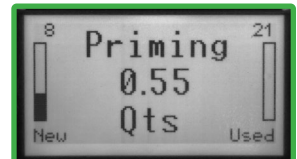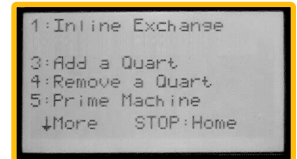


DRAINING THE TANKS



Connect any open end adapter to **red hose** and insert into appropriate disposal container.

Make sure all other hoses are disconnected!

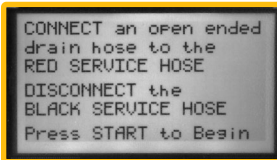

From the Main Menu, press



to proceed to the next menu.

Press

6
MNO

to drain the **New Fluid Tank**. Press

7
PQRS



to drain

the **Used Fluid Tank**. Press




to begin the process.

The unit will shut off when complete.

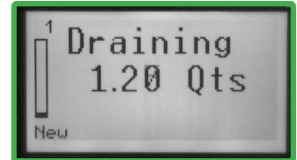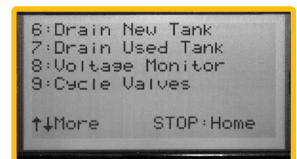

VOLTAGE MONITOR

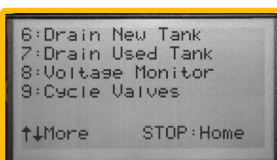

From the Main Menu, press




to proceed to the next menu.


Press


8
TUV


to display the voltage.

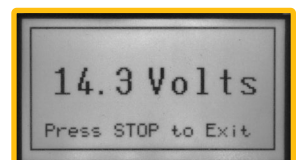


HALTED: REVERSE HOSES

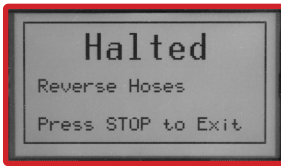


If the exchange stops and the display reads “Reverse Hoses”, turn vehicle **off**, switch the red and black service hoses, restart vehicle, and press .

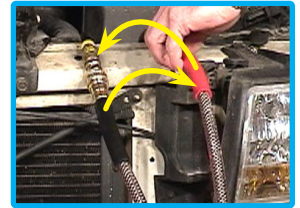


HALTED: SHIFT TO NEUTRAL

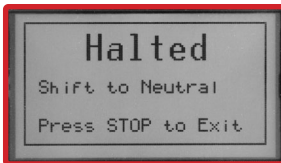

If the exchange stops and the display reads “Shift to Neutral”, set the vehicle’s parking brake, shift to Neutral, and press .



FILTER CHANGE DUE

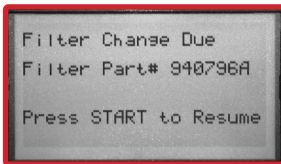


The machine will indicate when the canister filters need to be replaced. Remove service panel. Use a standard filter band clamp tool to unscrew old filters, and replace them with new filters. Make sure new filters are on tight.



IMPORTANT: Machine must be primed after filter change.

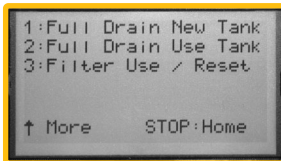


TOTAL FILTER USE




From the Main Menu, press  twice.

Press  to display the total filter use. Press  to reset.

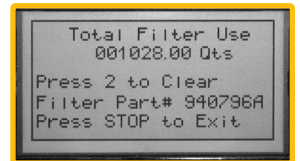


POWER FAILURE MEMORY

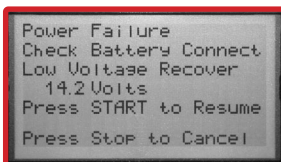


If there is a power failure during a transmission fluid exchange, the procedure can be continued seamlessly.

Simply reconnect the battery cables, and press .


The exchange will resume where it left off.

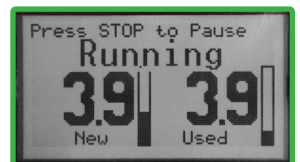

CYCLE VALVES

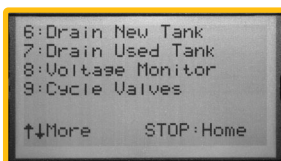

From the Main Menu, press  to proceed to the next menu.

Press  to cycle the valves.

